

# Catalogue

Overview .....	1
Appearance .....	1
Assembly .....	1
Specifications.....	2
App appearance.....	3
Handset requirements.....	3
Features.....	4
Local use .....	4
Remote assistance.....	5
USB HART modem .....	5
Upgrade.....	6
Hardware.....	7
Panel .....	7
Lights .....	8
Resistor switch.....	9
Power switch.....	9
Connection.....	10
Quick Guide And Troubleshooting.....	11
Appendix A : Supported transmitters.....	19
Appendix B : Common HART menus .....	20

## Overview

### Appearance




### Assembly

Item	Number
WiFi Adapter	1
Charger	1
Data cable	1
Hook	2
Clip	2
Packet	1
Data disc	1
Manual	1

## Specifications

<b>HART</b>	
Signal	1200bps , Bell202 FSK
<b>Wireless</b>	
WiFi signal	802. 11b/g/n 2. 4GHz Wi-Fi , Distance 50m
WiFi mode	AP/Station
<b>Loop power source</b>	
Interface	Same as HART communicate interface
Power	Max DC 21. 6V , Current 45mA
<b>Power</b>	
Battery cap	3600mAh Li-ion Battery
Battery life	Loop power source with 4mA : 12 hours
	Loop power source with 21mA : 8 hours
	Loop power source disabled : 16 hours
Interface	micro-usb
Charge time	Max current 1000mA , 240 minutes
<b>Other attributes</b>	
Dimensions	92mm x 70mm x 24mm
Weight	200g
<b>Environmental</b>	
Usage	-20 °C ~ +50 °C
Storage	-40 °C ~ +85 °C

## App appearance

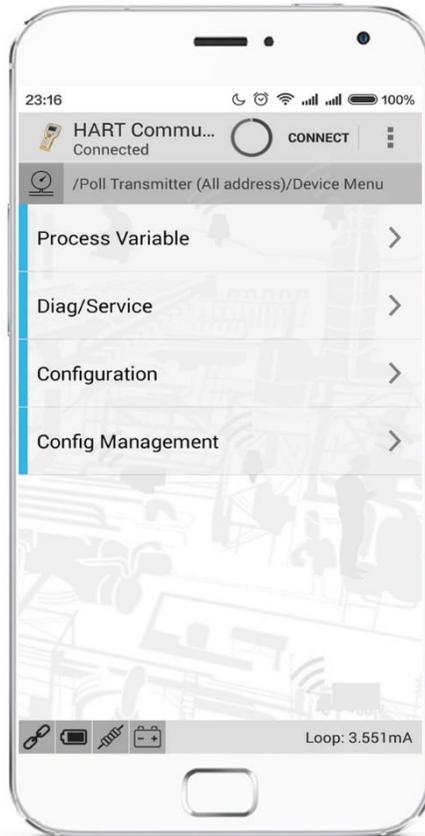

Download address:  
<http://app.woyatech.com>

## Handset requirements

OS	Android 4.1 or above
Screen size	4.3 inch or above

## Features

i595 uses APP + smart hardware architecture, it not only supports all general parameters of HART transmitter, also supports more than fifty transmitter' s advanced parameters, i595 has best cost-effective to replace Rosemount 475.

i595 has remote assistance, built-in loop power supply, built-in resistor, and other intelligence features. These technical innovation will save us much time and labour.

### Local use




The i595 hardware is a WiFi to HART adapter, it can work as WiFi AP or Station mode. When adapter work in “local” mode, it work as a AP essentially, also, When adapter work in “remote” mode, it work as a station essentially.

Normally, we set the i595 in “local” mode, so the android handset could connect to i595 AP through WiFi, with no password. In this mode, after the APP has connected to adapter, the data from APP to adapter will be transfer to HART side, vice versa, the channel is two-way.

Please referring to “Quick guide” section for detailed use steps.

## Remote assistance

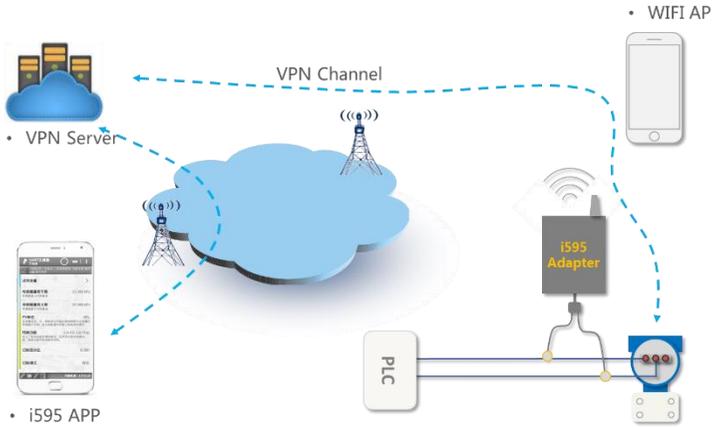


The upper figure is a topology of remote debugging system. the i595 adapter connect to VPN server through a WiFi hotspot AP. Inputting the serial number of adapter in i595 APP, the APP will connect to transmitter at remote place, then we can setup the remote transmitter just like "local" .

If we need use "remote" mode, the adapter will work in station mode, just like a handset. It will attempt to connect to a WiFi AP with default SSID and password, the i595 APP has provide a soft-AP for i595 adapter, please referring to the menu "Create hotspot" .

## USB HART modem

Sometimes, we want to setup the transmitter with PC software. i595 also can play a role of a usb interface HART modem.

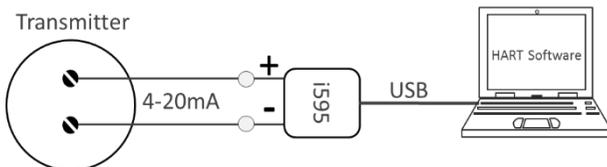


## **Upgrade**

i595 upgrade software automatically through the network, simple and quick.

## Hardware

### Panel

- Panel with resistor switch

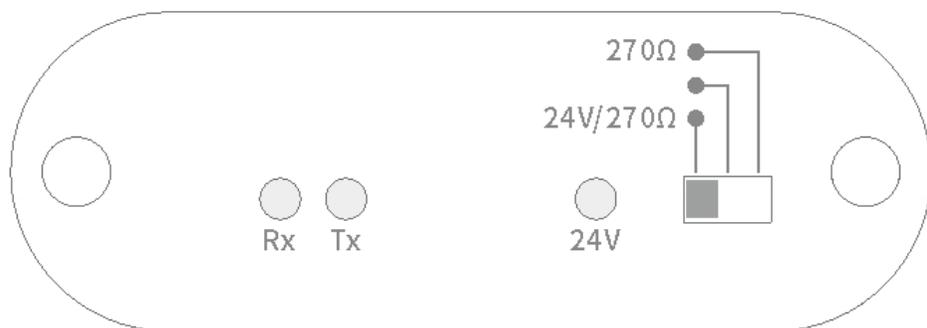

- Panel with power switch



## Lights

Light	Color	Status	Meaning
Rx	Red	Blink	Receive HART data from transmitter
		On	Loop power output protection mode.
Tx	Green	Blink	Send HART data to transmitter
		On	Loop power output protection mode.
24V	Red	On	Loop power on
Run	Green	Blink	During Startup, as a battery power gauge, blink 4 times indicator 100%.
		On	Local mode : Device running Remote mode : Connected to VPN server
Charge	Red	Off	Not charge or full charge
		On	Charging

Loop power output protection mode. For security, the i595 adapter will not keep Loop power outputting after reset even though the toggle switch is at "24V/270Ω" position, Under this situation, the Rx, Tx LED will both turn on indicating abnormal status. just reset the resistor switch to recover.

## Resistor switch


Position	Meaning
24V/270Ω	Both built-in loop power and 270Ω are enabled
Middle position	Both built-in loop power and 270Ω are disabled
270Ω	Only built-in 270Ω enabled

## Power switch


Position	Meaning
Local	Local mode, setup through WiFi
Middle position	Power off
Remote	Remote mode, setup through internet

## Connection


- **Type 1 General usage** , set resistor switch to middle position.

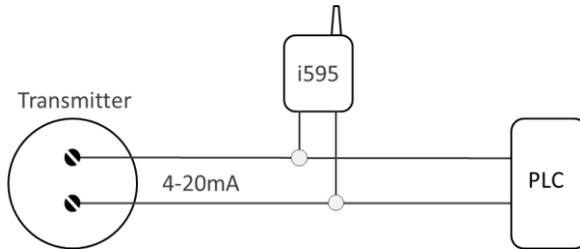


- **Type 2 Use built-in 24V/270Ω** , set resistor switch to 24V/270Ω position.

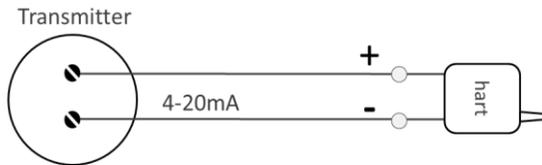

- **Type 3 Use built-in 270Ω** , set resistor switch to 270Ω position.

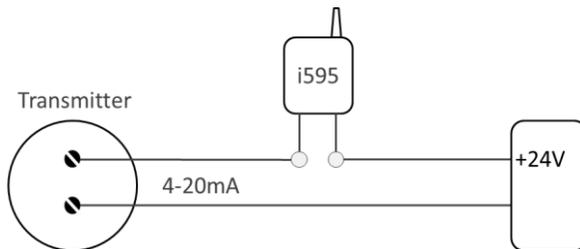

- **Type 4 Use for not loop powered transmitter**, set resistor switch to 270Ω position.

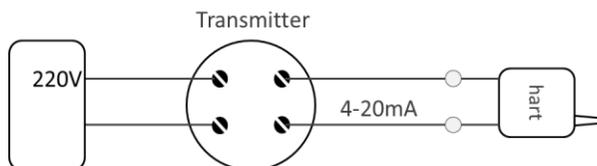

## Quick Guide And Troubleshooting

### Step 1 : Prepare


HART transmitter	
Android handset	
i595 adapter	


### Step 2 : Download and install APP

Download and install APP. Address: <http://app.woyatech.com>

Description	Troubleshooting	Resovle
Visit address failure	Checking that the phone can connect to internet.	
Install failure	Not android phone,or version too low.	Use android ver 4.1 or above.
	Insufficient space	Uninstall some other APPs

### Step 3 : Download license

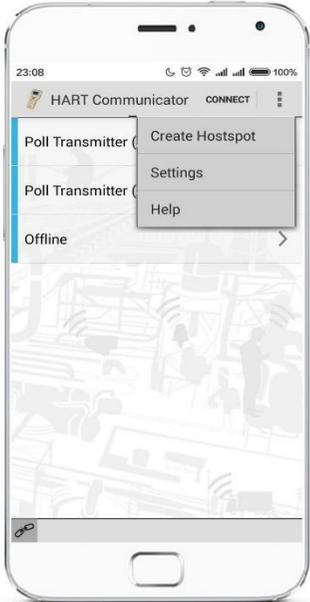
1	Click the button on top right corner, a menu is displayed.	
---	--	--

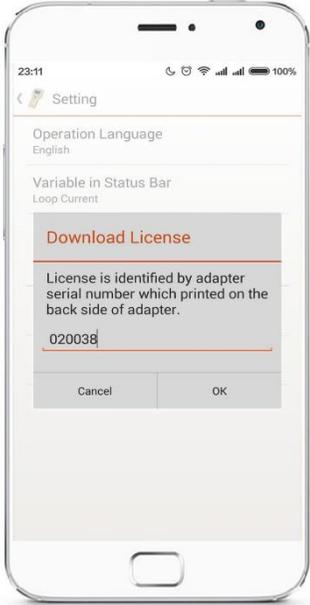2	<p>Get serial number from the back of i595 WiFi adapter. eg. 020038</p> <p>Click "Setting" -&gt; "Download License" .</p> <p>Input the serial number, then click OK to download license.</p>	
---	--	--


Description	Troubleshooting	Resolve
Download license failure	Checking that the phone can connect to internet.	
	The serial number is incorrect.	Inputting correct serial number

#### Step 4 : Connect transmitter

Please refer to the "Connection" section for more types.

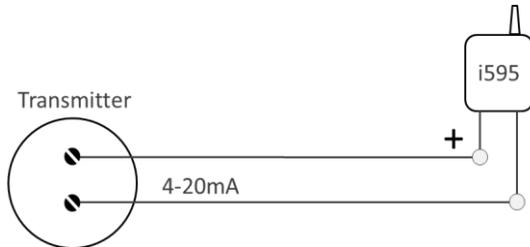



## Step 5 : Start i595 adapter

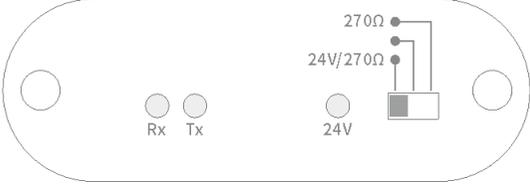
<p>Toggle the power switch to “local ”, the adapter will work in WiFi-AP hotspot mode.</p>	 <p>The diagram shows the top control panel of the i595 adapter. It features two circular LEDs labeled '运行Run' and '充电Chrg'. A power switch is positioned to the right of these LEDs, with '远端Remote' (Remote) above it and '近端Local' (Local) below it. The switch is currently set to the 'Local' position. To the right of the switch is a rectangular connector port.</p>
<p>Toggle the power switch to “24V/270Ω” , the 24V led should be light up , and the transmitter should be powered on.</p>	 <p>The diagram shows the top control panel of the i595 adapter. It features two circular LEDs labeled 'Rx' and 'Tx'. A power switch is positioned to the right of these LEDs, with '270Ω' above it and '24V/270Ω' below it. The switch is currently set to the '24V/270Ω' position. To the right of the switch is a rectangular connector port.</p>

Loop power output protection mode. For security, the i595 adapter will not keep Loop power outputting after reset even though the resistor switch is at “24V/270Ω” position, Under this situation, the Rx, Tx LED will both turn on indicating abnormal status. just reset the resistor switch to recover.

Description	Troubleshooting	Resovle
RUN led off	The battery’ s power is too low.	Charge up the battery.
24V led off	Output protection mode	Reset the “24V/270Ω” switch
Both TX/RX led on	Output protection mode	Reset the “24V/270Ω” switch
The transmitter have no power.	The line or switch is in correct position.	Checking that the line and switch are in correct position, and the connection is strong enough.



## Step 6 : Connect to adapter

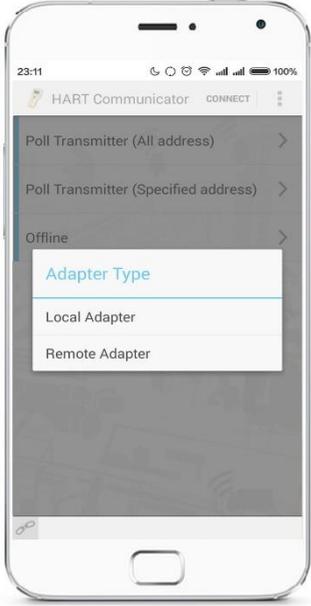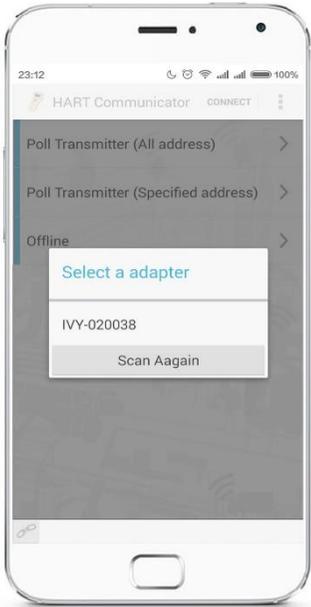1	<p>Click "CONNECT" on top right corner, a menu is displayed.</p>	
2	<p>Select "Local Adapter", now a adapter named "IVY-020038" is found. if no adapter is found, it May be the cause of android security softwares, please set the APP as a "trust" software or allow the APP to "get location info from GPS, WiFi or Base station". (But the APP never want to get location info, it only want a permission of scanning WiFi hotspot.)</p>	

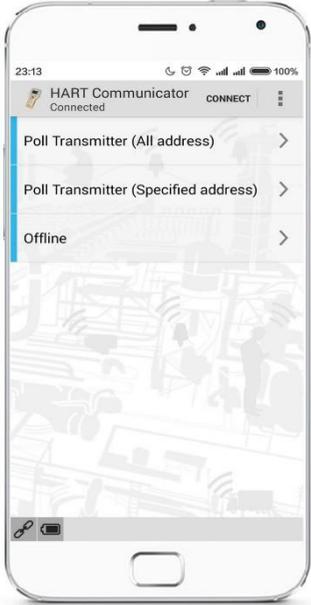3	<p>Click " IVY-020038" , after handset has connected to i595 adapter hotspot, a "Connected" info will be shown in the top left corner.</p>	
---	--	--

Description	Troubleshooting	Resovle
No adapter is found	Android security softwares restrict the permission of APP.	set the APP as a "trust" software or allow the APP to "get location info from GPS, WiFi or Base station" .
	WiFi signal is too week.	In general,less than 50 meters.
	The battery' s power is too low, Adapter is powered off.	Charge up the battery.
	Other problems	Rescanning, or trying other android phones.
Connection failed	WiFi signal is too week.	In general,less than 50 meters.
	Other problems	Reconnecting, or trying other android phones.

## Step 7 Scan transmitters

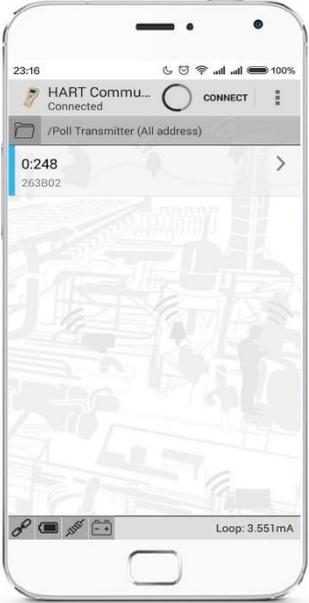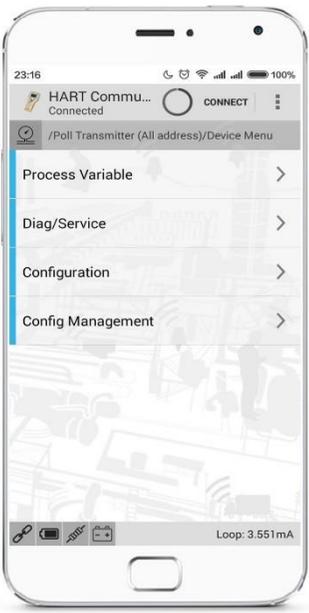1	<p>Click " Poll Transmitter(All address)" , it will scan address from 0 to 63.</p> <p>If the transmitter' s address is 0, it should be found within 10 seconds. The scanning address will be displayed at bottom right corner. The right figure show that a transmitter is found at address 0.</p> <p>Please repeat scan if no transmitter is found.</p>	
2	<p>Click the found transmitter to enter setup menus.</p>	

Description	Troubleshooting	Resovle
No transmitter is found	The transmitter have no power.	Checking that the line, switch is in correct position, and the connection is strong.
	The current loop of transmitter is faulted if loop current is not between 3.6mA and 22mA. You can connect a ammeter in series to test.	Trying other transmitters
	Address of the transmitter is not 0, It will lead to a longer polling time.	Polling with specified address.

### Step 8 : Finish

- 1、 Press the return button until app exited.
- 2、 Toggle the resistor switch to middle position to close the loop power.
- 3、 Toggle the power switch to middle position to shutdown adapter.

## Appendix A : Supported transmitters

i595 supports all the common hart parameters, in addition, also supports the following advanced parameters.

<b>Vendor</b>	<b>Model</b>
Rosemount	3051CD, 3051CG, 3051DP, 3051GP, 3051TG, 3051S, 8600D, 8800D, 8732E, 2088, 248, 3144, Vortex, 8732C
Micro Motion	1700, 2700
E+H	Promag 10D,10H,10L,10P,10W. Promag 50D,50H,50L,50P,50W. Promass 40E, Promass 80A,80E,80F,80H,80I,80P,80S. Prowirl 72F,72W. t-mass 65I,65F. Prosonic Flow 91W,93W. PMD 70, PMD 75, PMD 55, FMD 76, FMD 77, FMD 78. TMT 182, FMR 240, FMR 25x, FMU 40, FEC 12.
ABB	2600T Series
Siemens	TH300
Yokogawa	DY Series, SE Series, EJA110A
Fuji	FCX-A2
Fisher	DVC6000 Series, DVC6200 Series, DVC2000 Series

## Appendix B : Common HART menus

