


① Panel

• Top

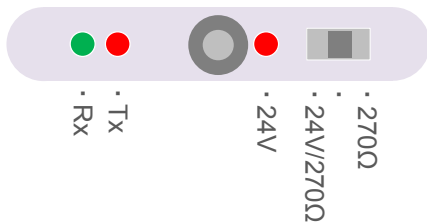

Rx LED

Flash : Receiving data from transmitter
Solid : Abnormal, refer to "FAQ"

Tx LED

Flash : Sending data to transmitter
Solid : Abnormal, refer to "FAQ"


24V LED

Solid : Outputting 24V DC

Switch

Left : Enable 24V DC output and built-in resistor
Middle : Disable 24V and built-in resistor
Right : Disable 24V, enable built-in resistor


• Bottom

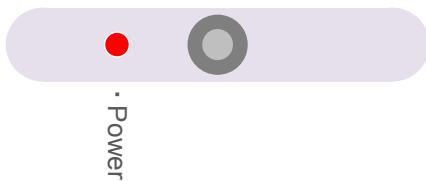

Power LED

Solid : Powered on

• Type III, Field power supply, Wire resistance > 250Ω

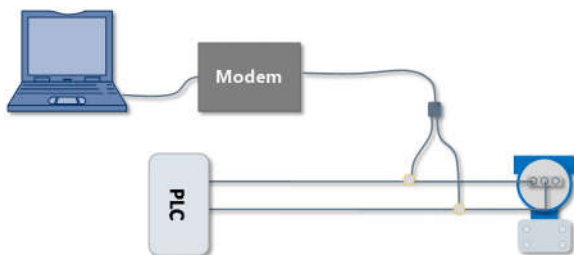

1. Connect modem to transmitter power terminals, Polarity insensitive
2. Toggle switch to middle position


③ Check COM No. of the Modem

• Install Driver

1. Check your system type firstly as below: "Start" -> Right-click "Computer" -> Click "Properties" -> "System"
2. Find USB HART Modem driver in the CD, if your system is X64 Edition, install CP210xVCPInstaller_x64.exe, otherwise install CP210xVCPInstaller_x86.exe.

• Check COM No.

Click "Start" -> Right-click "Computer" -> Right-click "Manage" -> Click "Device Manager" -> Double-click "Ports(COM&LPT)", The driver which is labeled begin with "Silicon Labs" is the USB HART Modem driver, Port No. is COM3 in this example.

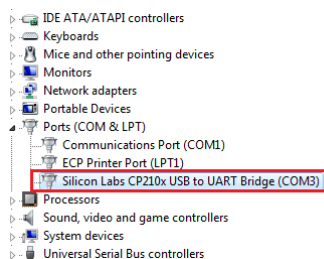


② Connection

• Type I, Use the built-in power supply.



1. Toggle switch to " 24V/270Ω" position.
2. Pay attention to the positive and negative pole hooks.
3. please do not use Modem to the power supply 4-Wire transmitter.

• Type II, wire resistance < 250Ω

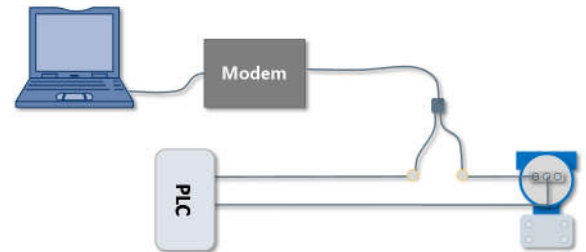

1. Connect in loop in series, Polarity insensitive
2. Toggle switch to right (270Ω) position

④ Android App

- Please scan QR code on the product shell to download app.
- Use USB OTG line to connect android phone and modem.
- If your modem does not support android APP, also can contact the manufacturer to upgrade.



⑤ FAQ

• Rx, Tx LED both turn on

- 24V DC output is under protection mode, Please reset toggle switch
- For security, modem will not keep 24V DC outputting after reset even though the toggle switch is at "24V/270Ω" position, Under this situation, the Rx, Tx LED will both turn on indicating abnormal status.

• Scan no transmitter

- If the transmitter LCD does not light up, Please check the connections.
- Misuse built-in resistor, Please check resistor toggle switch.
- Restart computer after driver installation.
- HART software choose the right COM port.
- Contact us.

Shanghai WOYA IoT Technologies Co., Ltd.
www.woyatech.com
support@woyatech.com
+86 400-6188-920